


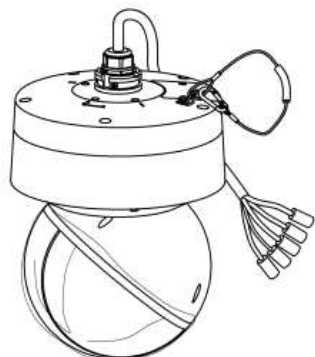

Network Speed Dome

Quick Start Guide


1.




2.



3.

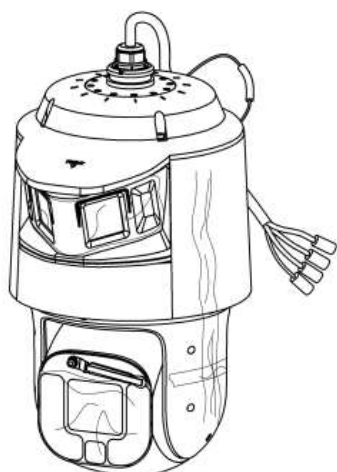

4.

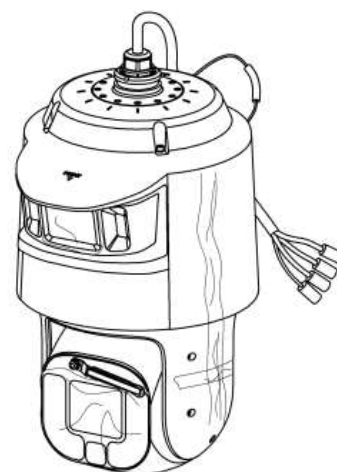


5.




6.








7.

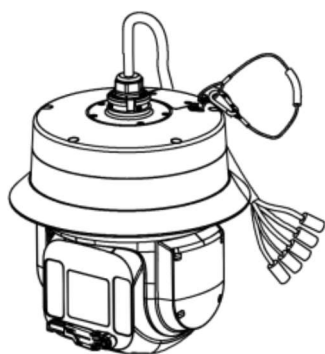



8.

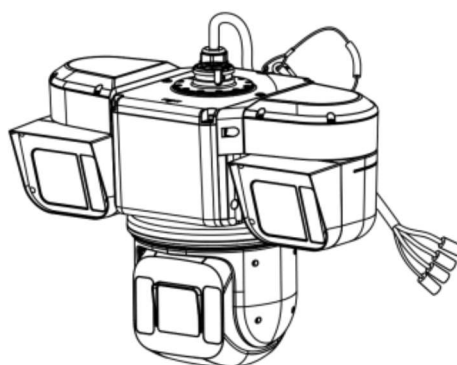


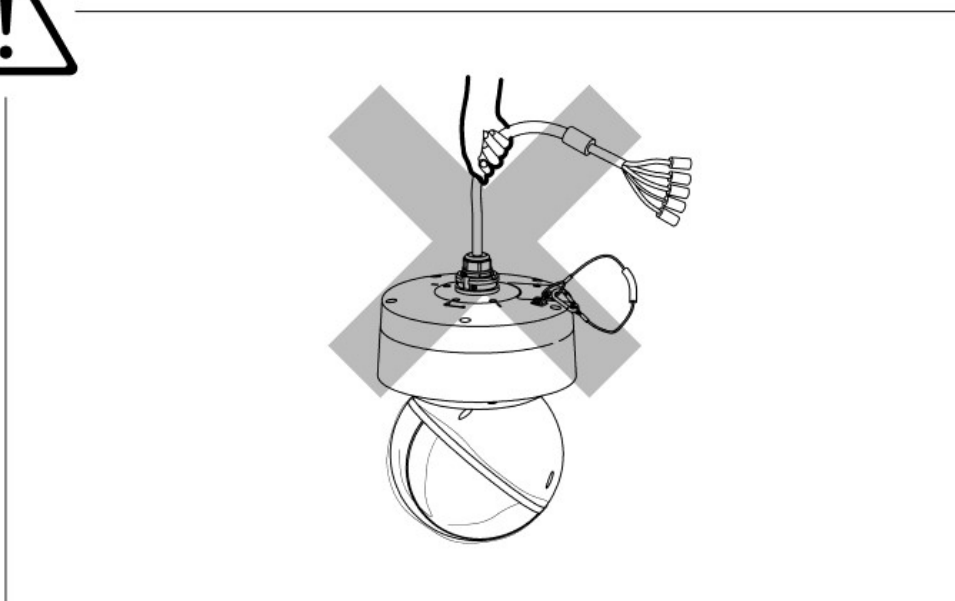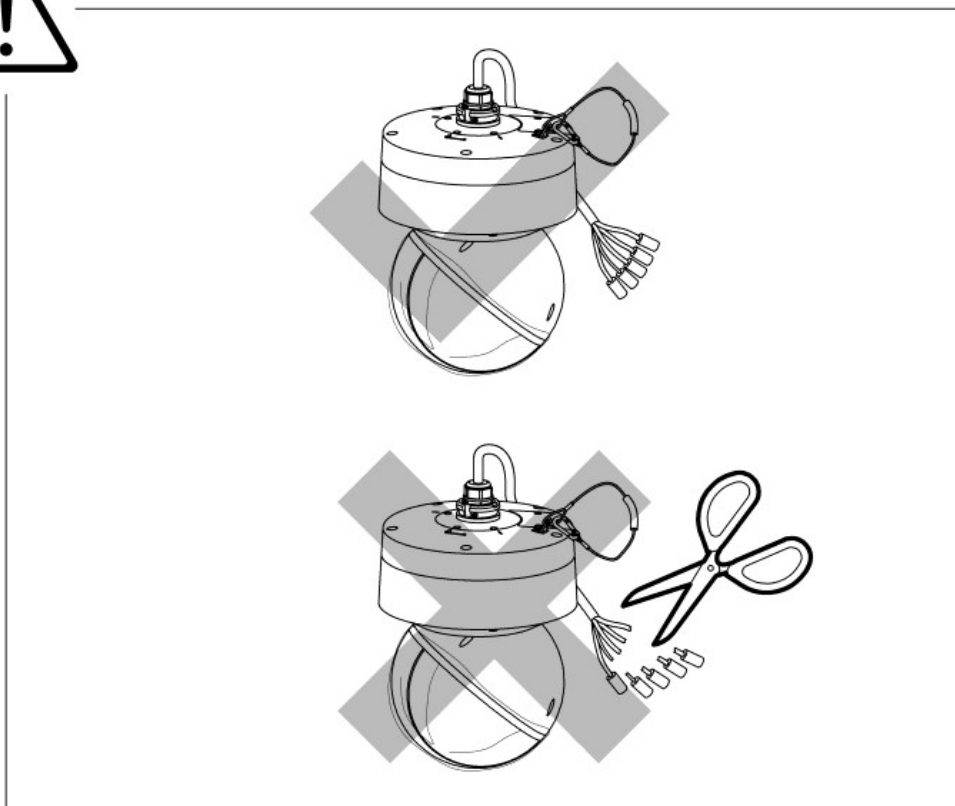


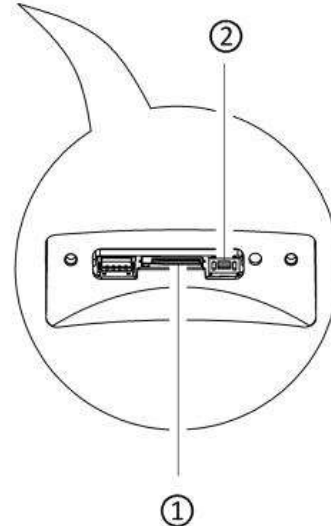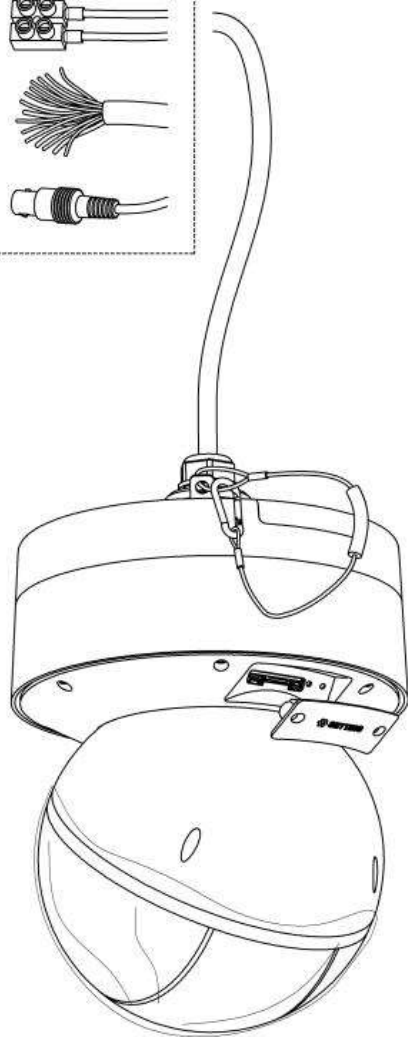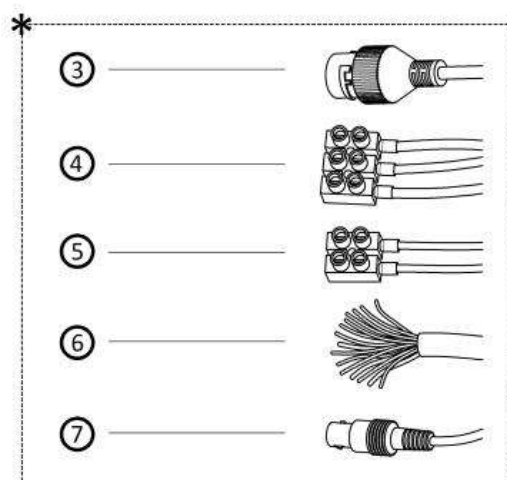


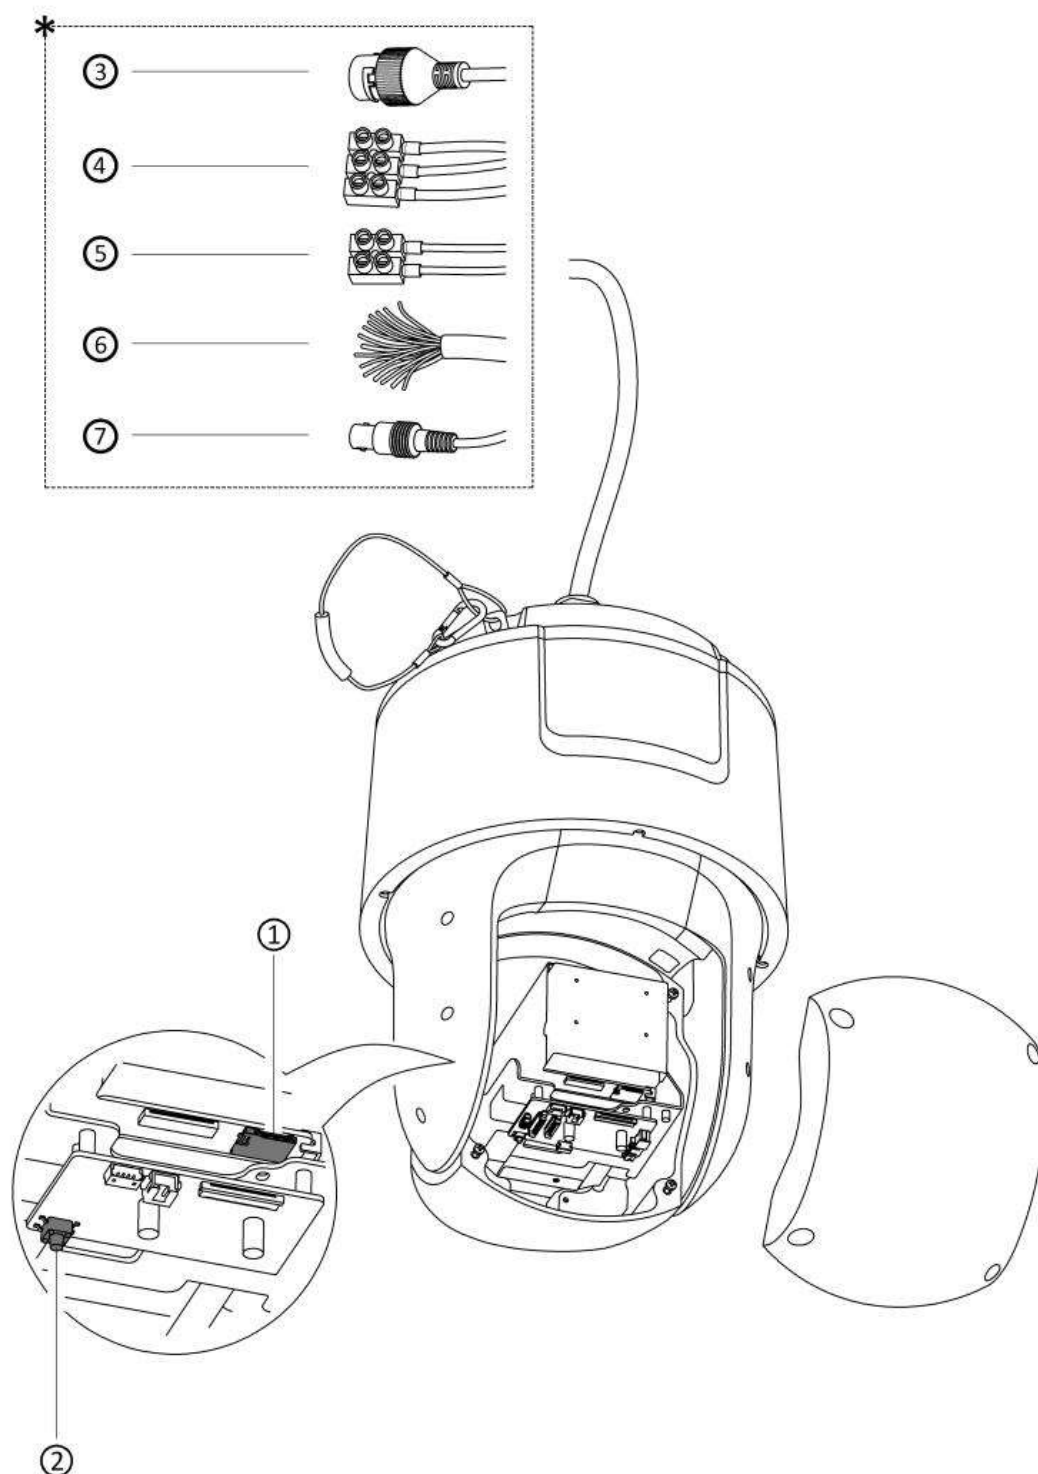



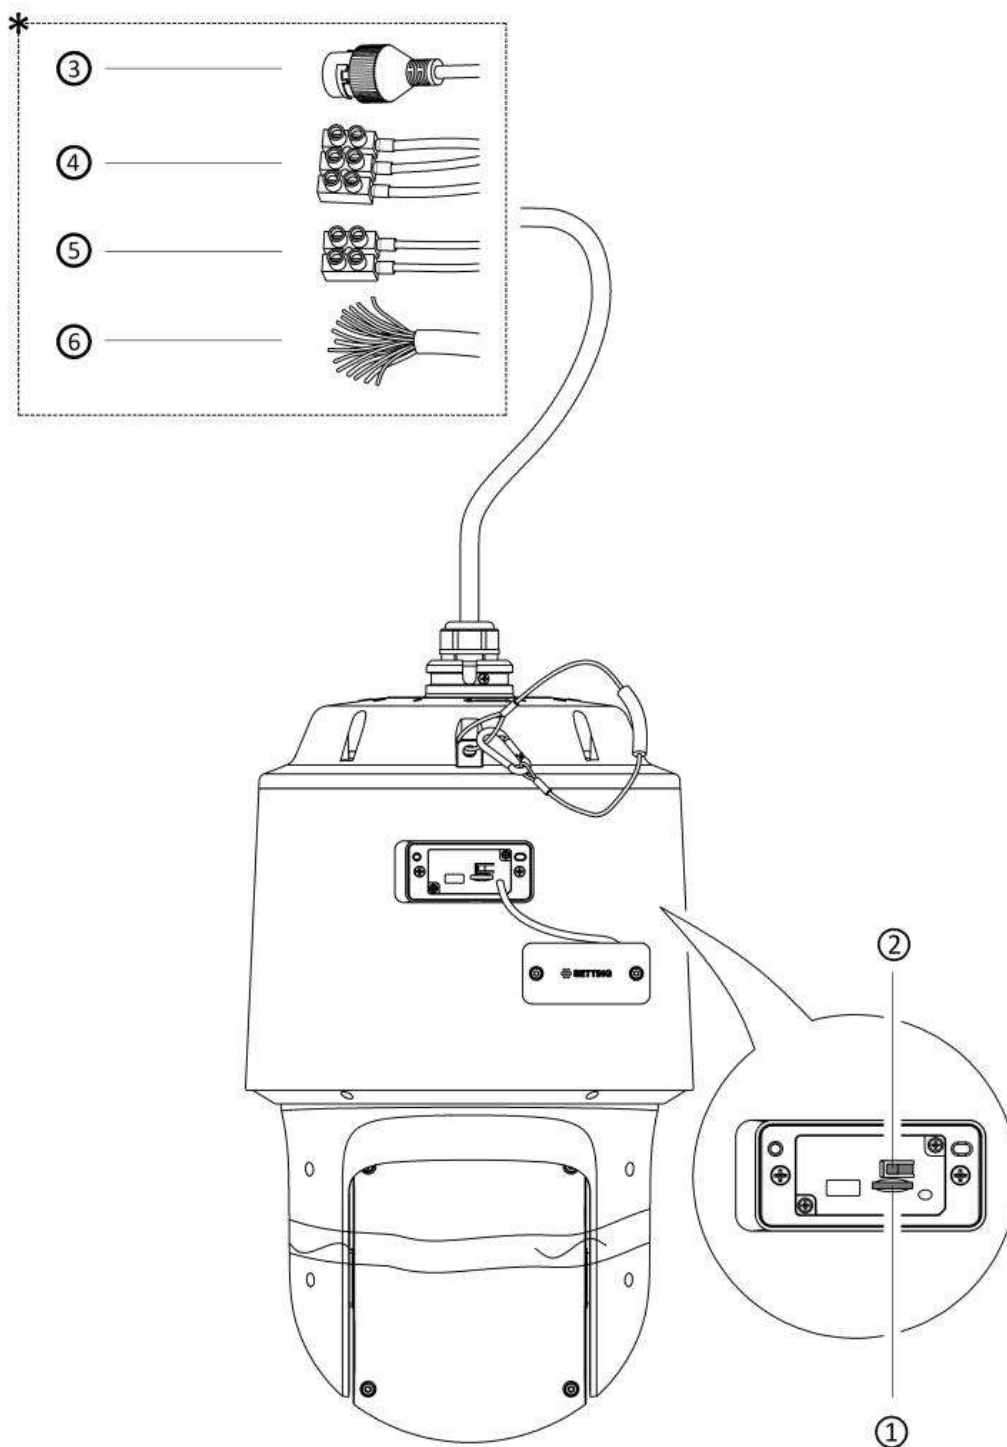



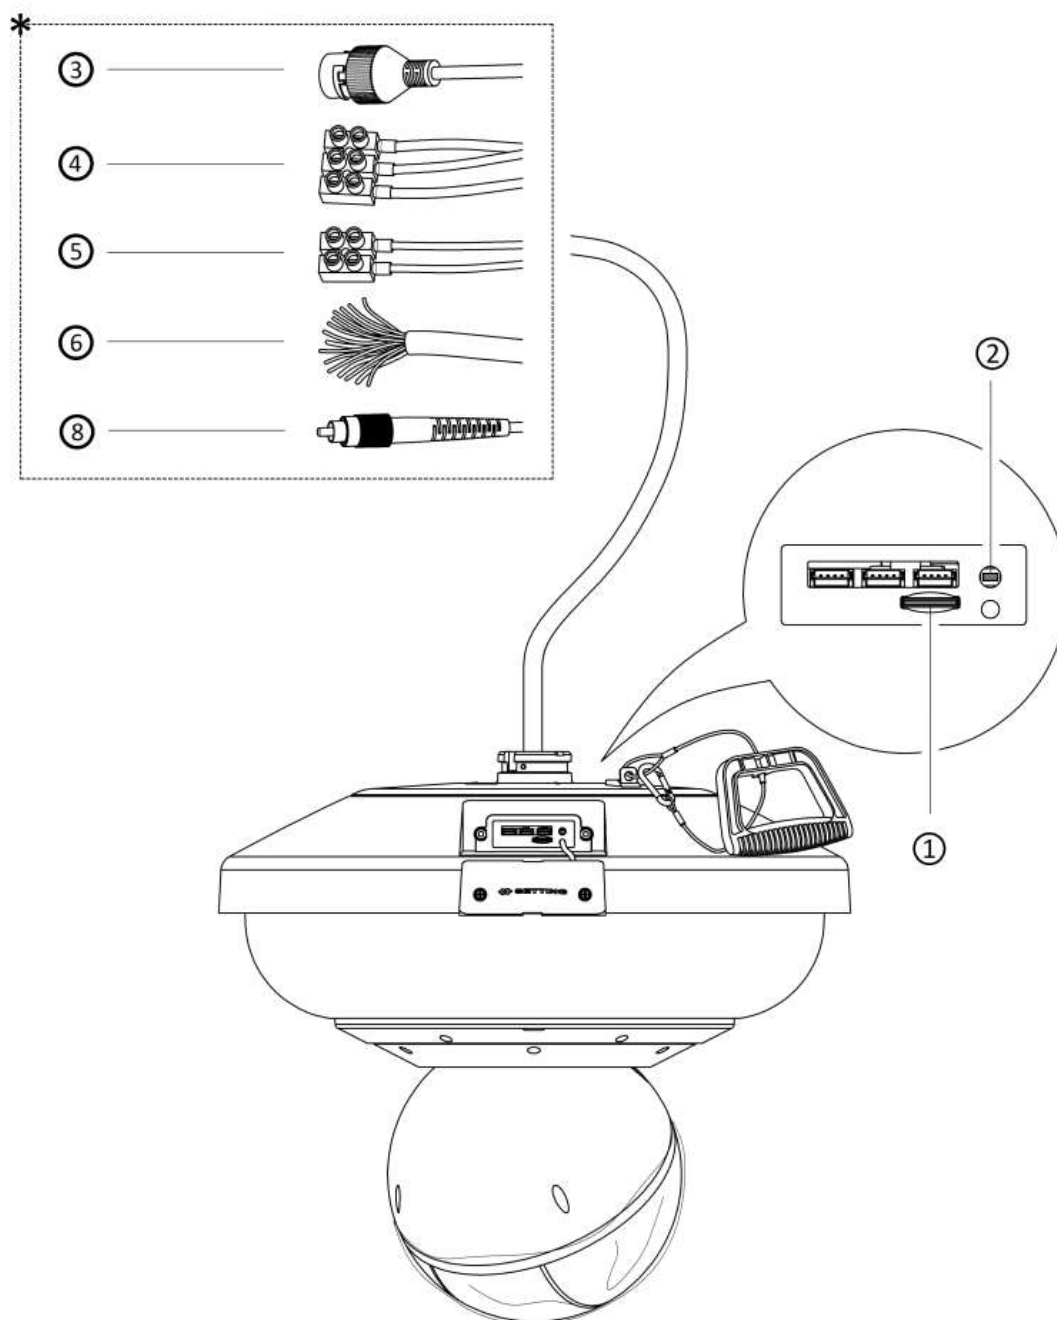





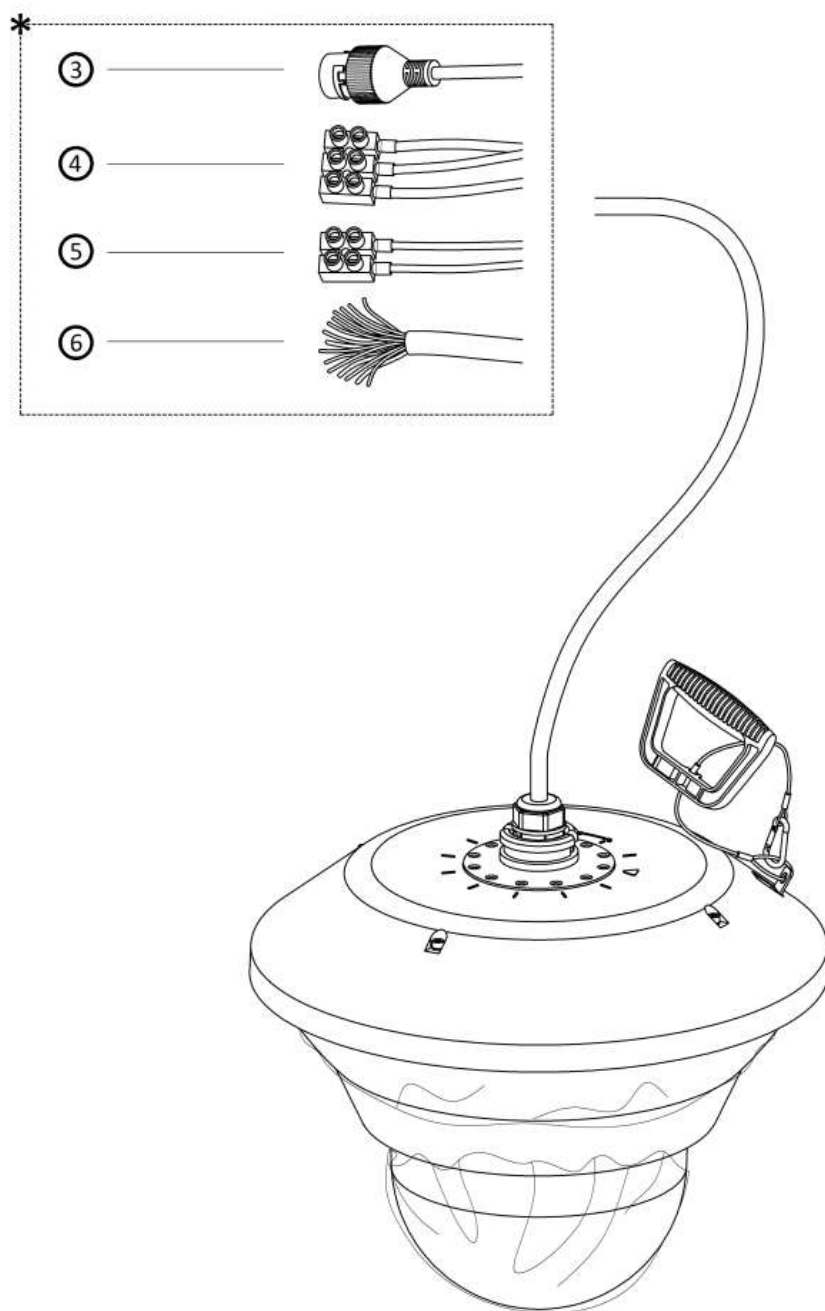


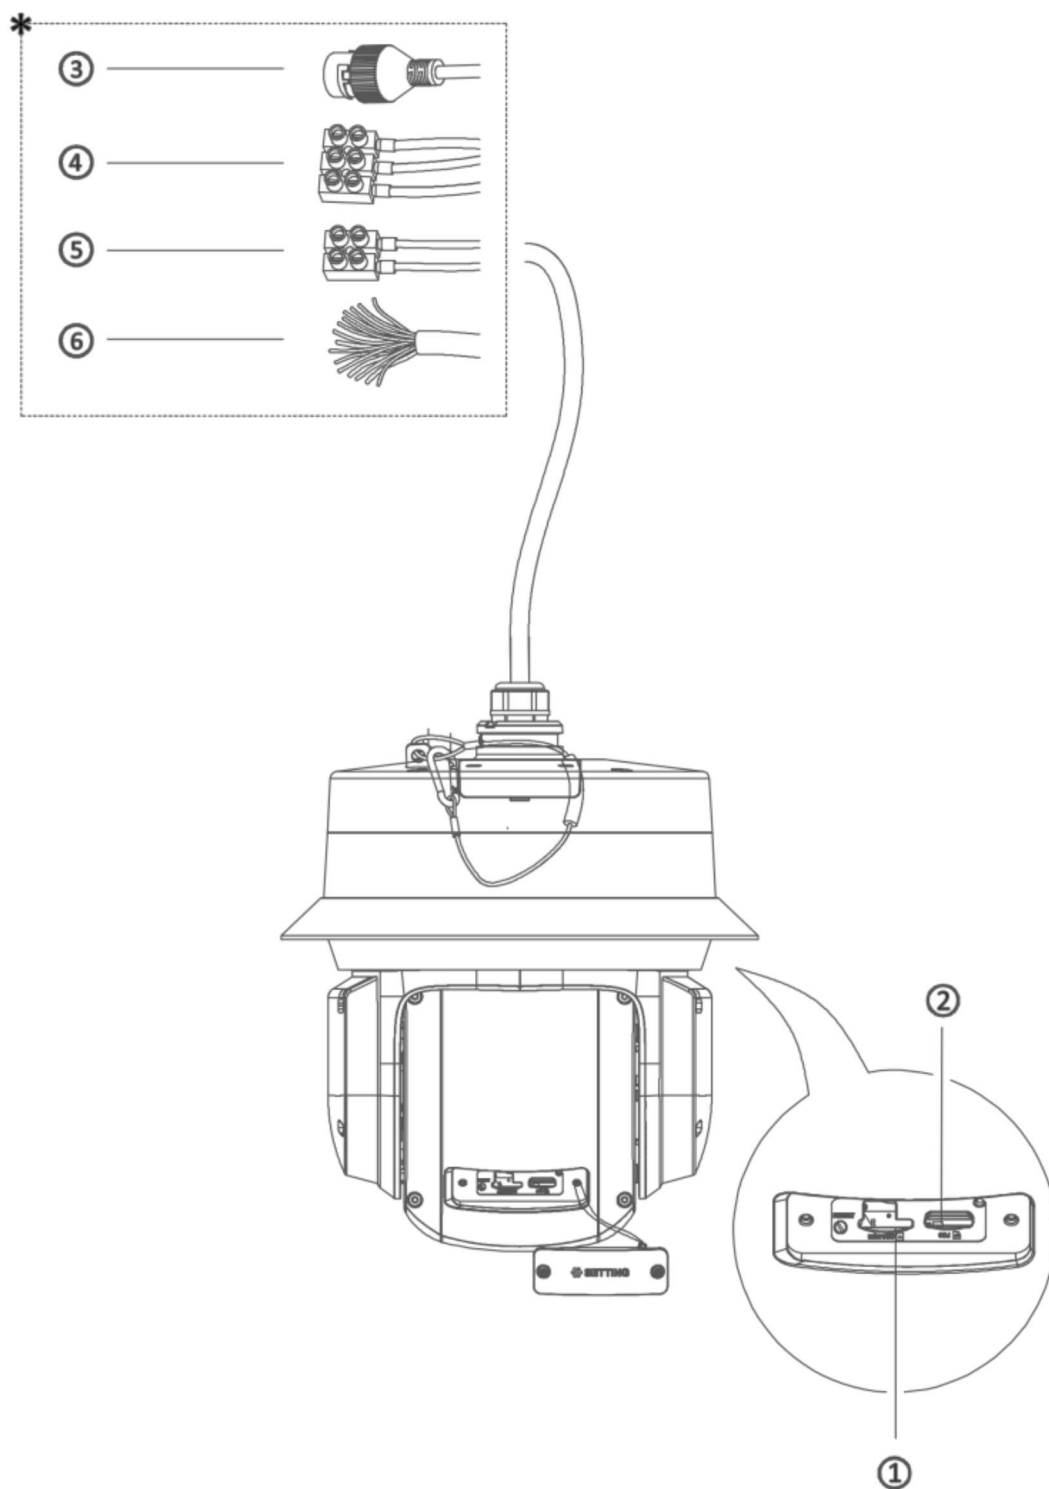

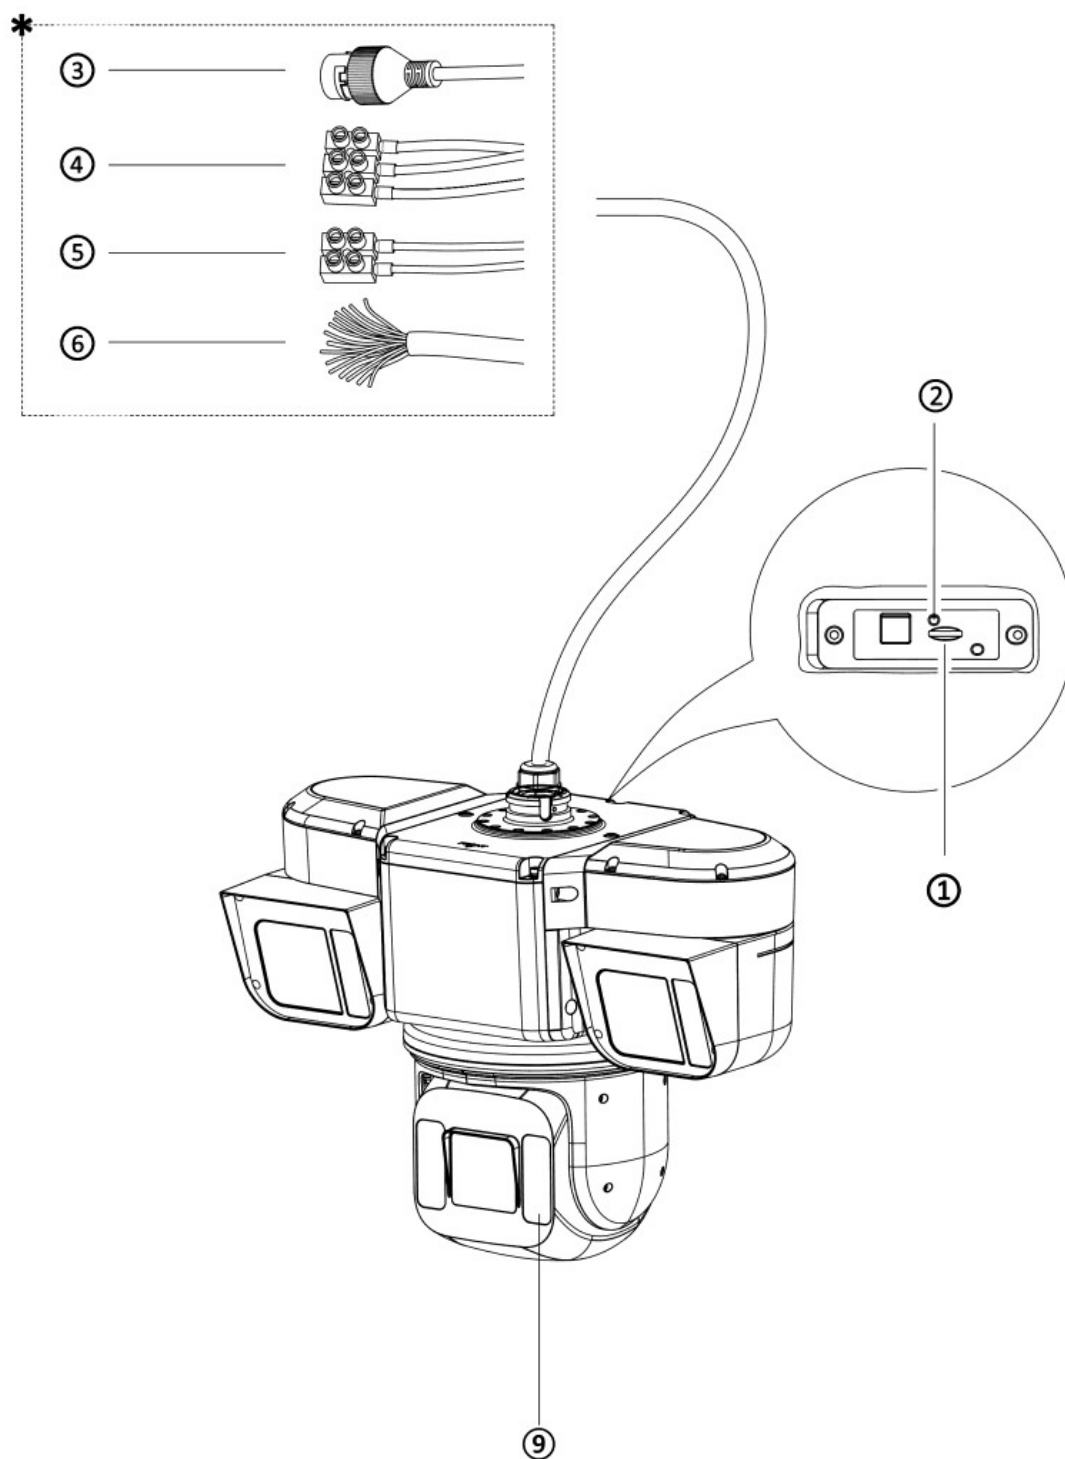

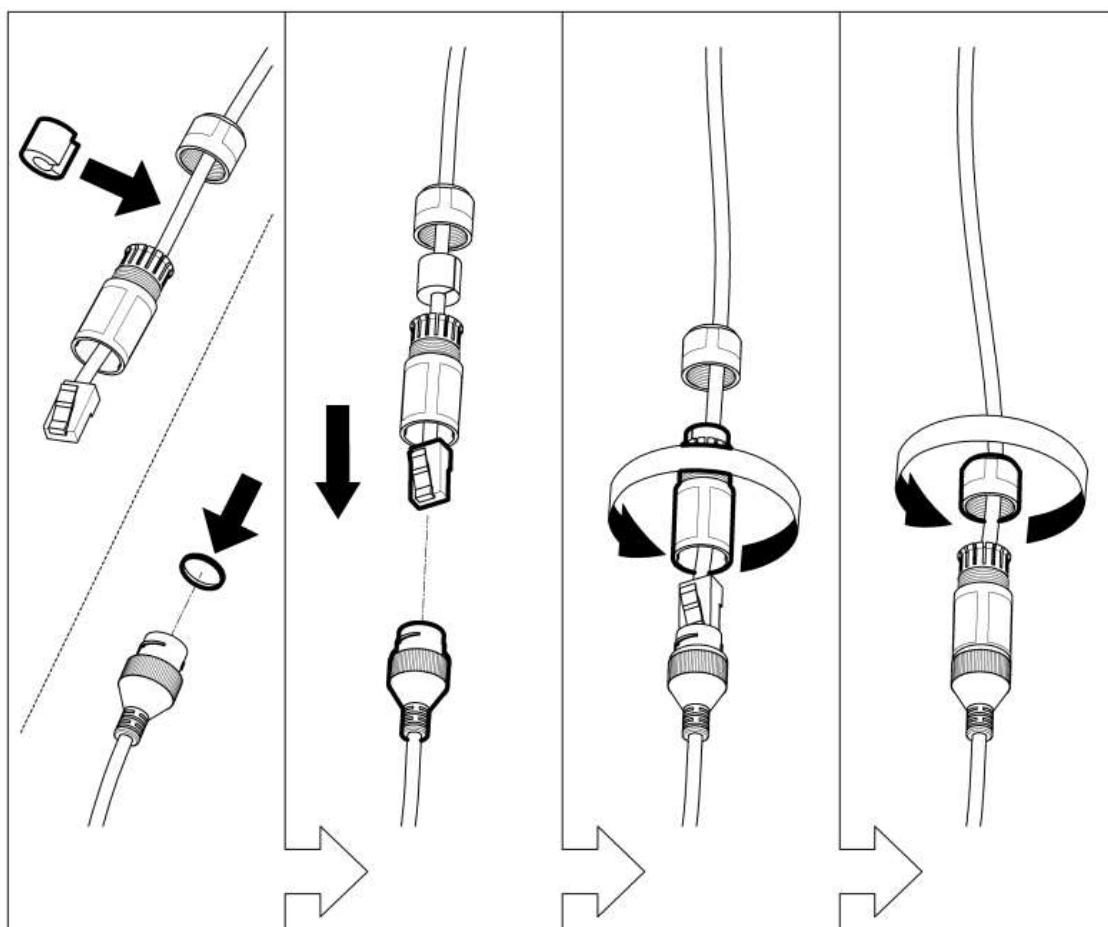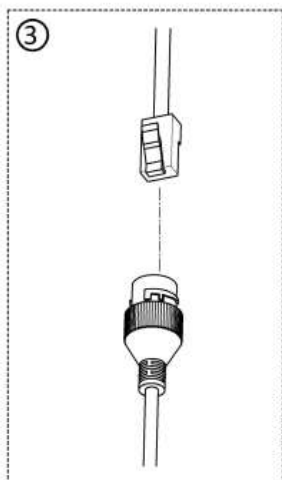


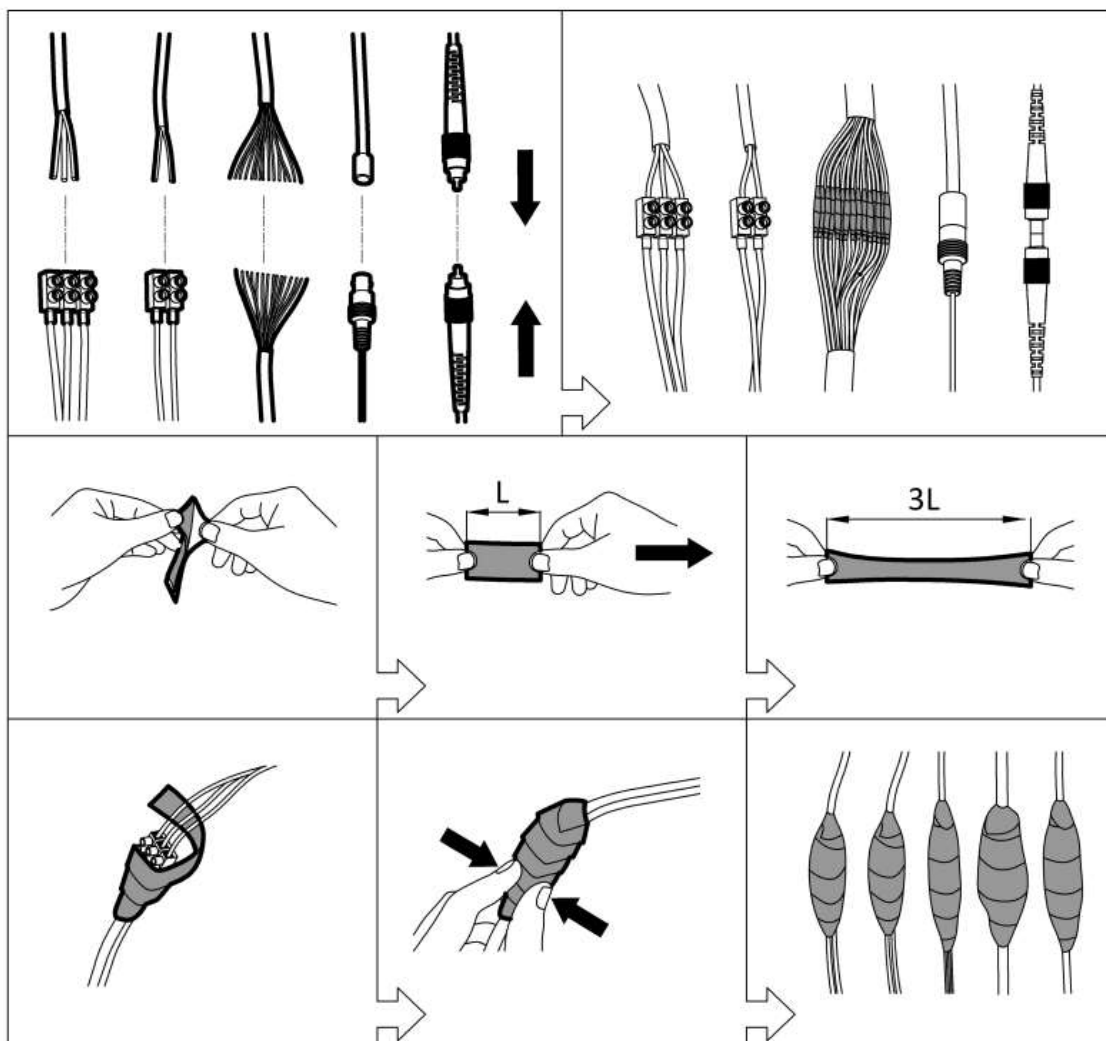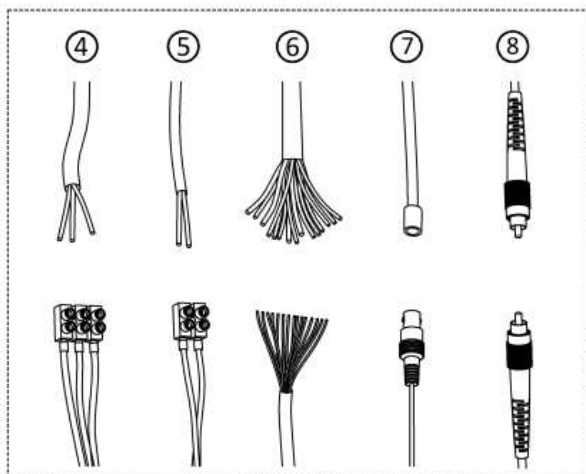

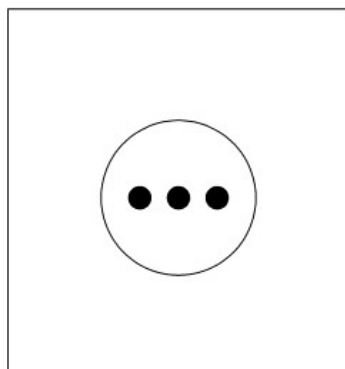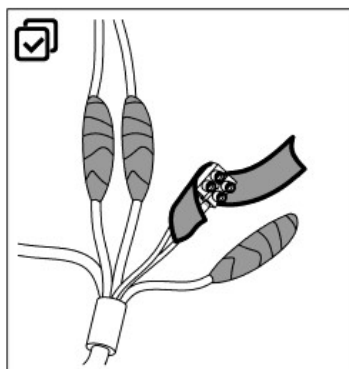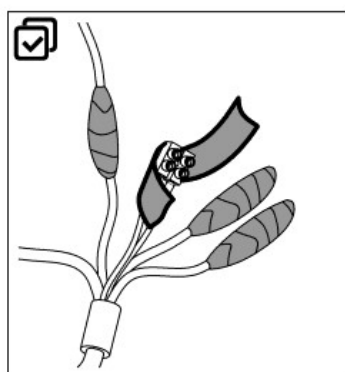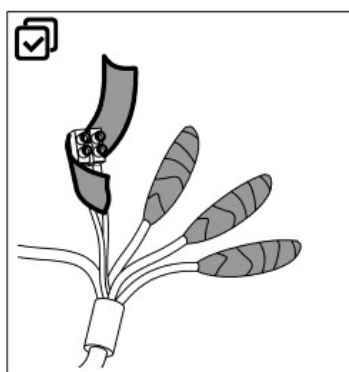





1

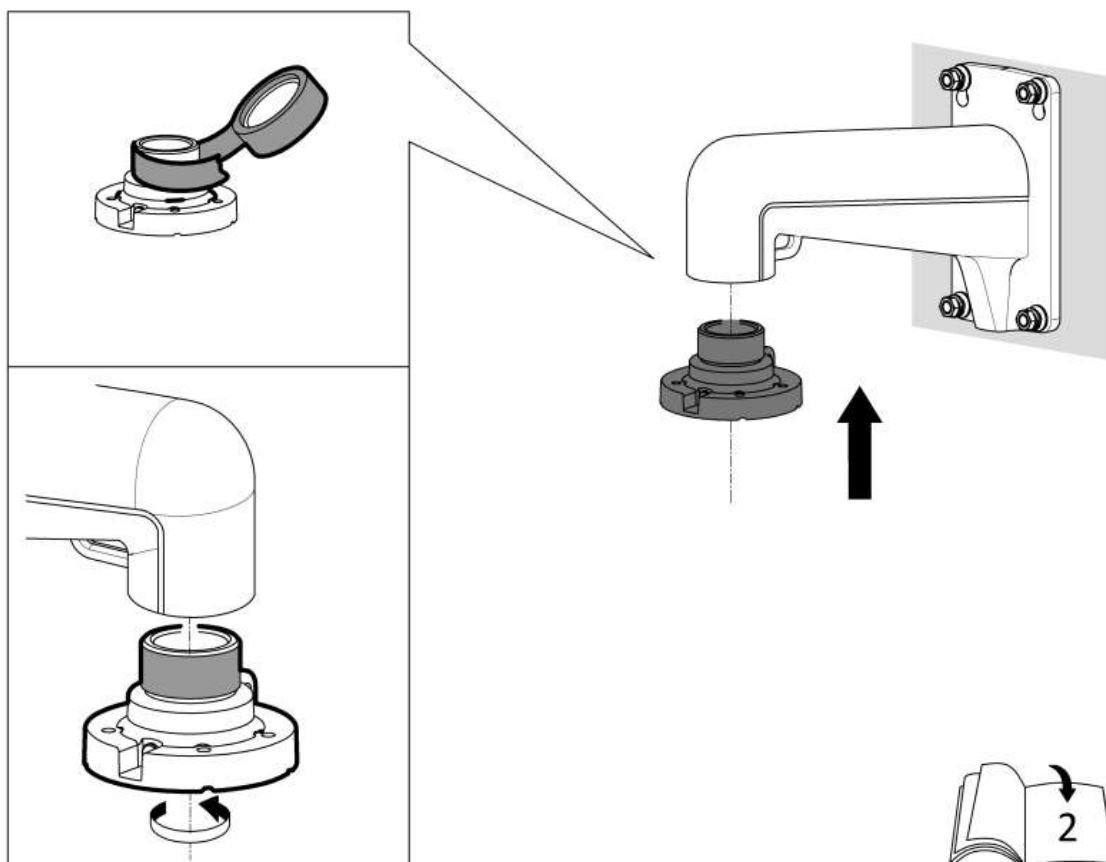


2

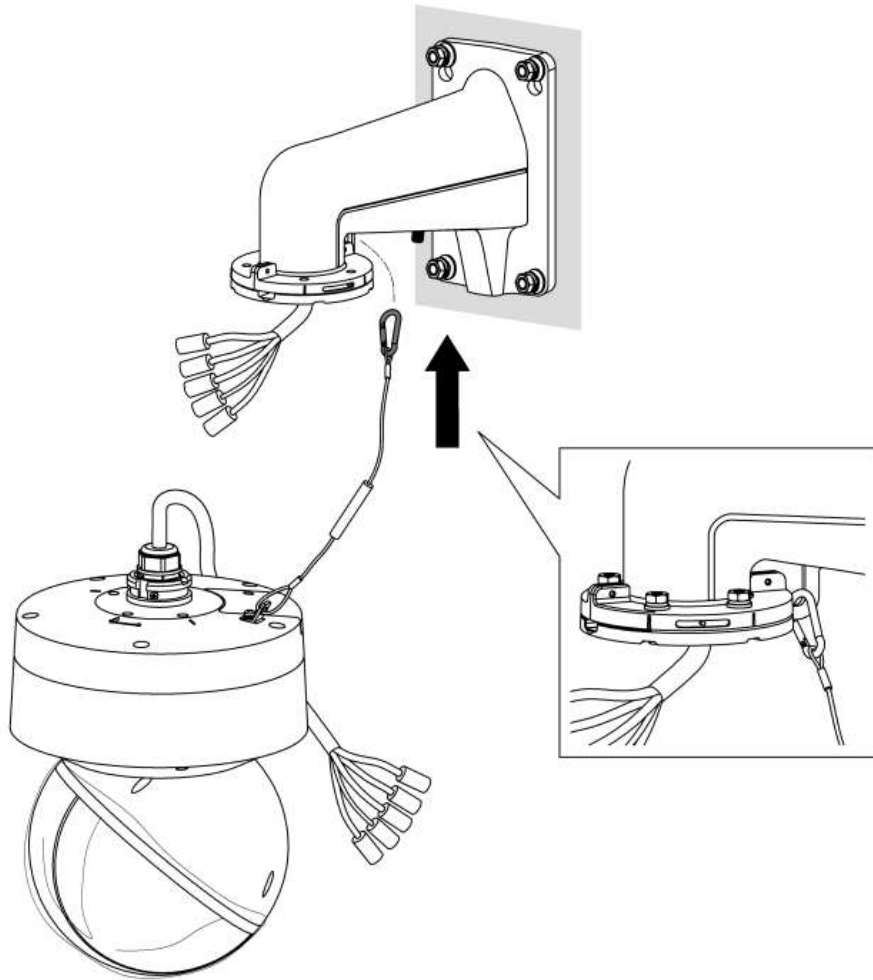


3

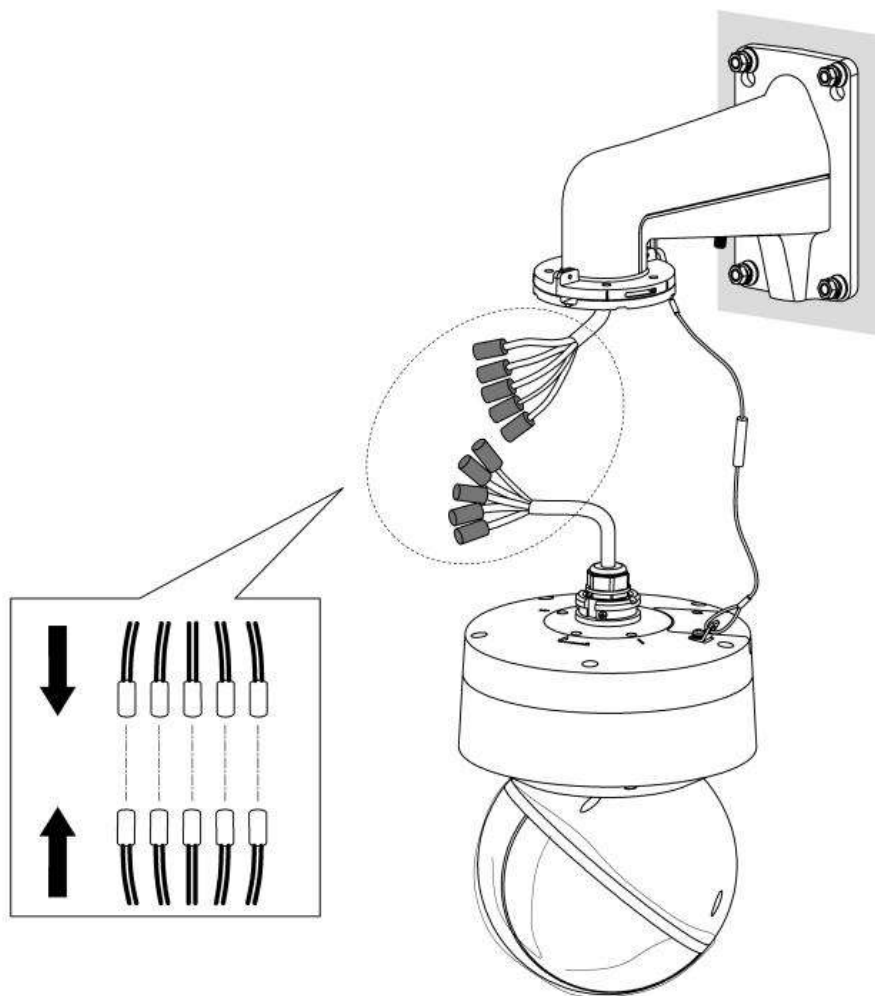


4

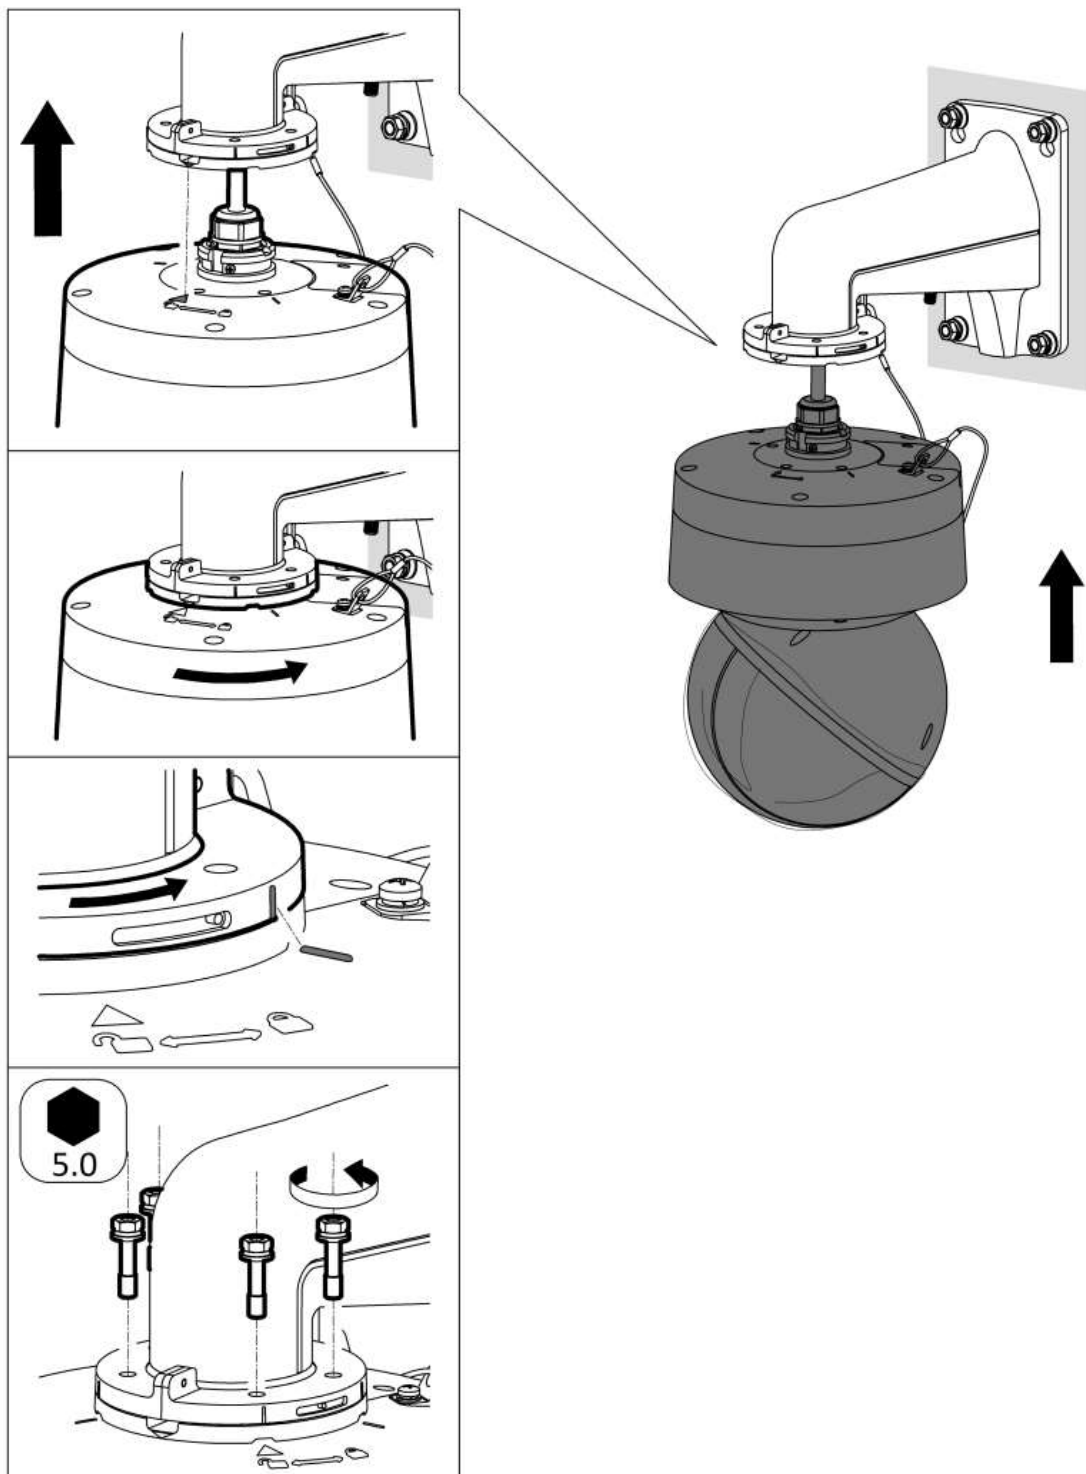

5

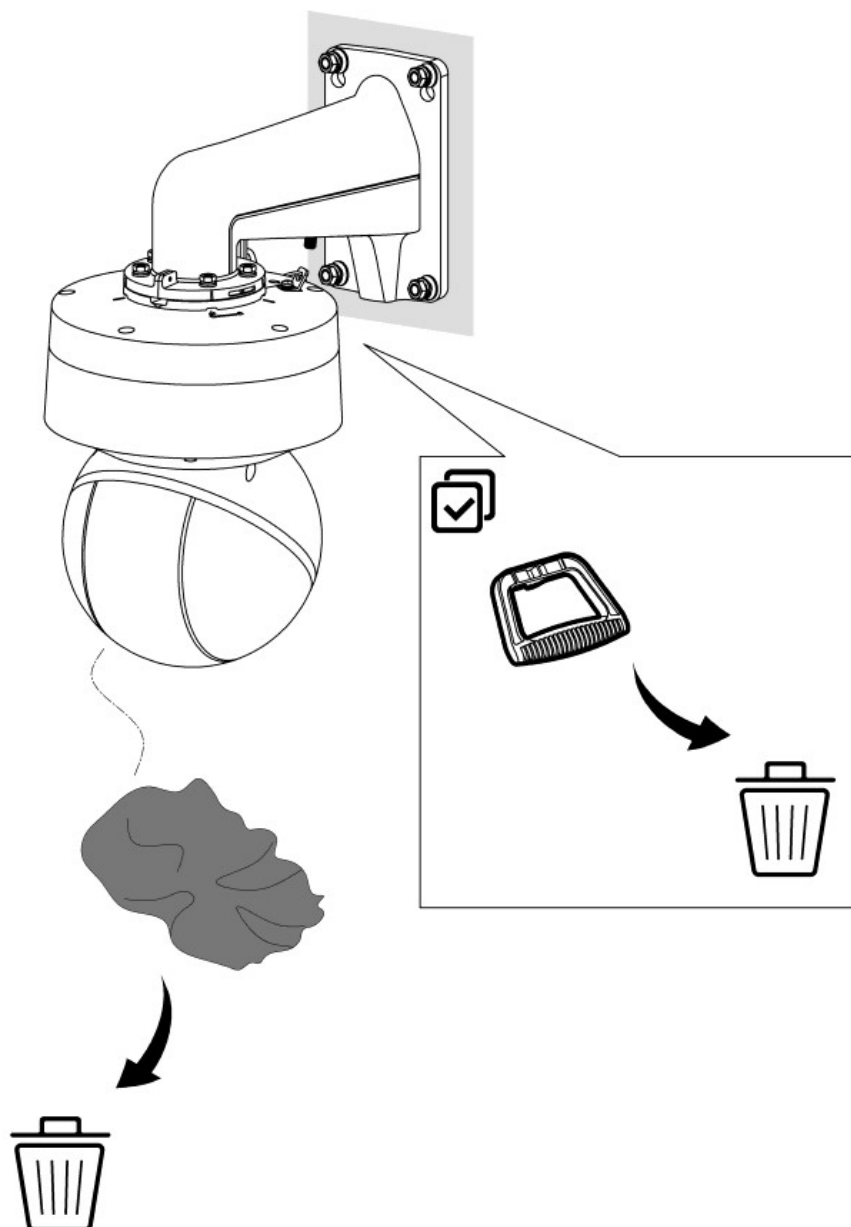

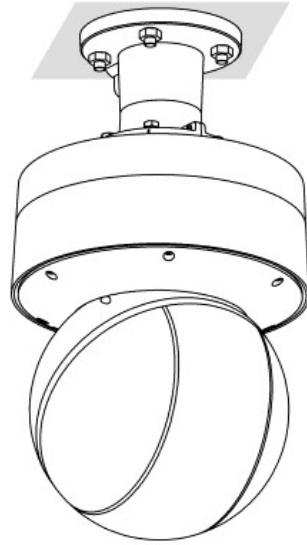

 Read this manual before using the product.


Product appearance is for reference only and may differ from the actual product.

Interface

- ① Memory card slot
- ② Reset
- ③ Network interface
- ④ Power interface
- ⑤ RS-485 interface
- ⑥ Audio & Alarm interface
- ⑦ BNC interface
- ⑧ Fiber optical interface
- ⑨ Laser

Note: The interface varies with the models. Please refer to the product datasheet for details.

Alarm Output

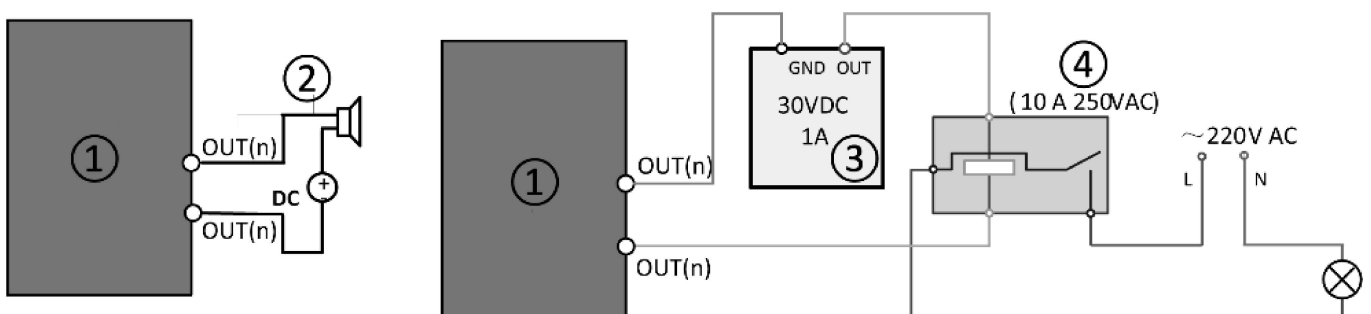

- ① Relay output
- ② DC load
- ③ Power supply
- ④ JQC-3FG Relay



Protective Measures for Outdoor Installation



Activate and Access Network Camera



See Far, Go Further